

P.A. - S.p.A. - EQUIPAGGIAMENTI TECNICI DEL LAVAGGIO

VIA MILANO, 13 – CASELLA POSTALE 115 – 42048 RUBIERA (REGGIO EMILIA) – ITALY Tel. +39 0522 623611 – Fax. +39 0522 629600 – R.E.A. RE 156319 – R.I. RE11535 – Mecc. RE 013446 C.F. e P. IVA 01035950359 – Cap. Soc. i.v. € 750.000,00 – Codice Identificativo C.E.E. IT 01035950359 ART. 2497 - BIS C.C. DIREZIONE E COORDINAMENTO BENETTI sri R.I. TRIB. DI RE 01480690351 $\textbf{Web:} \ \text{http://www.pa-etl.it} - \textbf{E-mail:} \ \text{info@pa-etl.it}$





VNR- OHD VNR- IHD - Check Valve

Technical manual: E 280

Flow regulating valve.

Allows a one-way flow, preventing the back flow.












•	60.2100.00	VNR-OHD	G 1/4 FF	brass	DN8
•	60.2120.00	VNR-OHD	G 3/8 FF	brass	DN10
•	60.2140.00	VNR-OHD	G 1/2 FF	brass	DN15
•	60.2150.00	VNR-OHD	G 3/4 FF	brass	DN20
•	60.2160.00	VNR-OHD	G 1 FF	brass	DN25
•	60.2170.00	VNR-OHD	G 1 1/4 FF	brass	DN30
•	60.2145.00	VNR-IHD	G 1/2 FF	S.S.T. Ai303	DN15


- -Sturdy construction in S.S.T. and brass.
- -O ring NBR (Nitrile)
- -Return action of piston carried out by spring
- -Minimum pressure loss.
- -Rapid intervention at minimum flow variation
- -Easy assembly


Technical specifications


Max temperature: 90°C													
Part number	Rated pressure	Permissible pressure	Minimum pressure intervention	Flow rate	Inlet Outlet	Weight							
	bar - MPa	bar - MPa	bar - MPa	L/min	Α	g							
60.2100.00	280 - 28	310 - 31	0.2 - 0.02	25	G1/4 FF	114							
60.2120.00	280 - 28	310 - 31	0.2 - 0.02	40	G3/8 FF	192							
60.2140.00	280 - 28	310 - 31	0.2 - 0.02	80	G1/2 FF	446							
60.2050.00	280 - 28	310 - 31	0.2 - 0.02	140	G3/4 FF	860,2							
60.2160.00	280 - 28	310 - 31	0.2 - 0.02	200	G1 FF	1403,8							
60.2170.00	280 - 28	310 - 31	0.2 - 0.02	450	G1 1/4 FF	2058,4							
60.2145.00	350 - 35	390 - 39	0.2 - 0.02	80	G1/2 FF	544							

DIMENSIONAL DRAWING

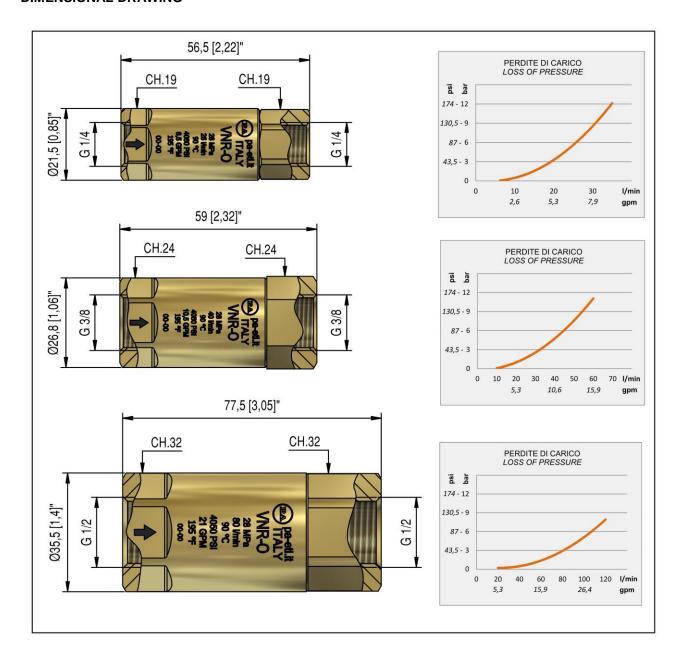

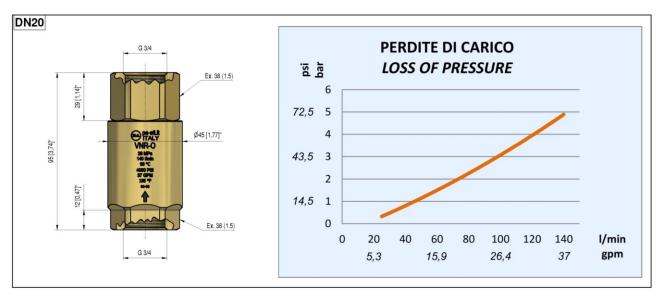

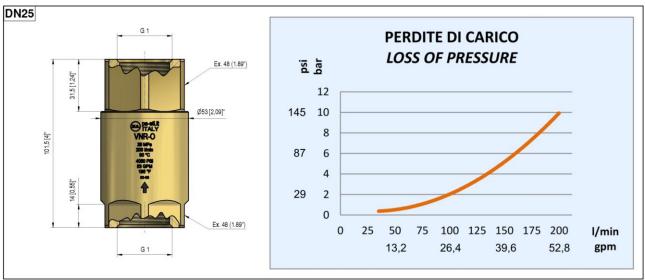

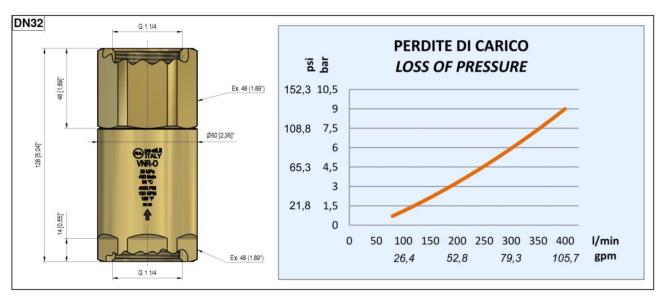

Last update: 30/01/17

INSTRUCTIONS

SELECTION

This product is to be utilized with clean fresh water, even slightly additivated with normal detergents. For use involving different or corrosive liquids, contact the PA Technical department. Appropriate filtration should be installed when using unclean liquids. Choose the valve in line with the data of normal running (system rated pressure, max flow and max temperature). In any case, the pressure of the machine should not exceed the permissible pressure rate imprinted on the valve.

INSTALLATION

Make sure that the system is well proportioned. In particular, fit a piping system in line with the flow and pressure specifications. A bad proportioned system can ruin, without repair, all single components or damage the performance. This accessory, on a system that produces hot water, must be fitted in front of the heat generator. This product is bound to be incorporated on a finished machine. On a system that generates hot water, anticipate the fitting of accessories that limit the accidental increase of fluid temperature.

Always install a safety valve that protects the pressurized inlet channel.

ATTENTION: During assembly, respect the direction of the flow indicated on the valve.

The valve is designed to work in installations that remain always full of water. If it appears necessary to empty the part of the circuit downstream of the valve, it is advisable to adopt an aparatus that guarantees a gradual start of the pump or the filling of the circuit at low pressure.

OPERATIONS

Water flows freely in a one-way direction, while it is totally blocked in the opposite direction.

Hermetic sealing is ensured by Viton seals.

The internal construction allows a rapid convertion in case of back flow and low pressure drop.

PROBLEMS AND SOLUTIONS

PROBLEMS	PROBABLE CAUSES	SOLUTIONS
Valve leakage	Worn out seal Material matter in the seat Worn out seat	Replace Remove and clean Replace valve body
Slow closure	Valve not properly sized Piping too small	Change type of valve Replace

REGULATIONS

The Project and construction of our products comply with: norm CEI EN 60335-2-79 first edition, published 1999-03 and relative variations to the project of norm prEN1829.

Read this manual before starting the assembly

For a correct utilization, follow the directions described in this manual and re-print them on the <u>Use and maintenance</u> manual of the machine.

The present manual is valid for all valves named VNR- OHD VNR- IHD

MAINTENANCE

Maintenance has to be carried out by **Specialized Technicians**.


SPECIAL: every 800 working hours (circa 20,000 cycles), control the wear of the seals and internal parts.

ATTENTION: reassemble the valve in the correct manner paying special attention to the flow direction indicated on the valve.

.The manufacturer is not to be considered responsible for damage as a result from incorrect fitting and maintenance-


Technical data, descriptions and illustrations are indicative and liable to modification without notice

60.2100.00 VNR-OHD check valv. brass 1/4FF Bsp

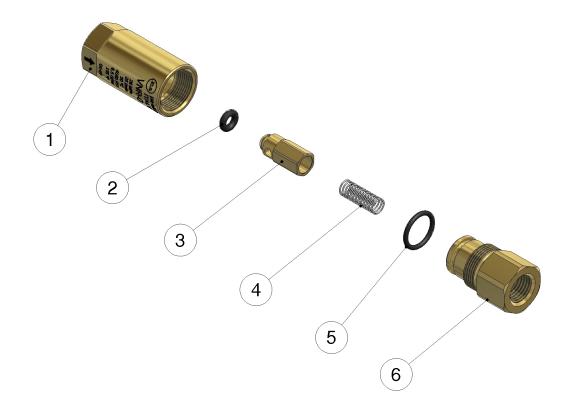


Pos	. P/N	Description	Q.ty K11	<2K3K	(4	Pos.	P/N	Description	Q.ty K	1K2K3	3K4	
1	60.2101.31 Couplin	ng, 1/4 Bsp F x M18x1 F brass	1		3	4 6	0.0867.51 Spring,	0,5x6,5x22 mm Sst.	1			25
2	10.3125.00 O-ring,	2,5x4 mm	1		10	5 1	0.3060.01 O-ring,	1,78x12,42 mm Ni 85	1			10
3	60.0859.99 Shutter	pin, brass+or 2.5x4 mm N	1		10	6 6	0.2102.31 Shutter	coupl., 1/4F Bsp brass	1			3

60.2120.00 VNR-OHD check valv. brass 3/8FF Bsp

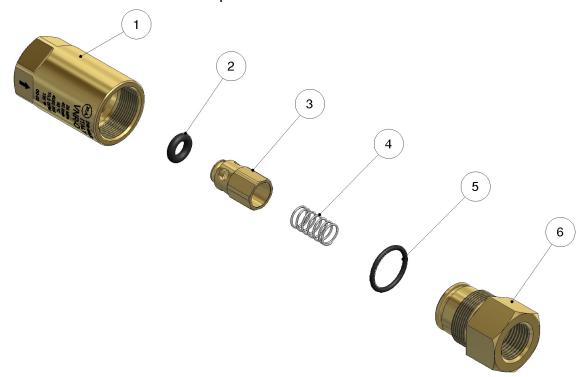


Pos	. P/N Desc	cription Q.	ty K1	IK2k	(3K4		Pos.	P/N	Description	Q.ty K	1K2K	3K4	
1	60.2121.31 Coupling, 3/8 Bsp F x M	M22x1 F brass 1				3	4 (60.0053.51 Spring,	0,7x9x20 mm Sst.	1			10
2	10.3213.00 O-ring, 3x6 mm	1	ı			10	5	10.3066.01 O-ring,	1,78x15,6 mm Ni 85	1			10
3	60.0052.99 Shutter pin, brass+o-ri	ng 3x6 mm 1	1			10	6 (60.1811.31 Shutter	coupl., 3/8F Bsp brass	1			3

60.2140.00 VNR-OHD check valv. brass 1/2FF Bsp

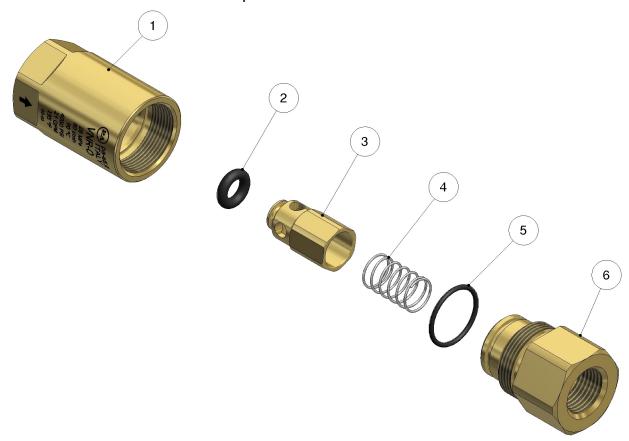


F	os.	P/N Description	Q.ty	K1	K2K	3 K 4		Pos.	P/N	Description	Q.ty K1	IK2K	3K4	
	1	60.2141.31 Coupling, 1/2 Bsp F x M30x1,5F brass	1				3	4	60.0489.51 S	pring, 0,8x13,3x27 mm Sst.	1			5
	2	10.3292.00 O-ring, 4x8 mm	1				5	5	10.3072.60 C)-ring, 1,78x21,95 mm Ni 85	1			10
	3	60.0488.99 Shutter pin, brass+or 4x8 mm	1				5	6	60.2809.31 S	hutter coupl., 1/2F Bsp brass	1			3

60.2145.00 VNR-IHD check valv. sst 1/2FF Bsp

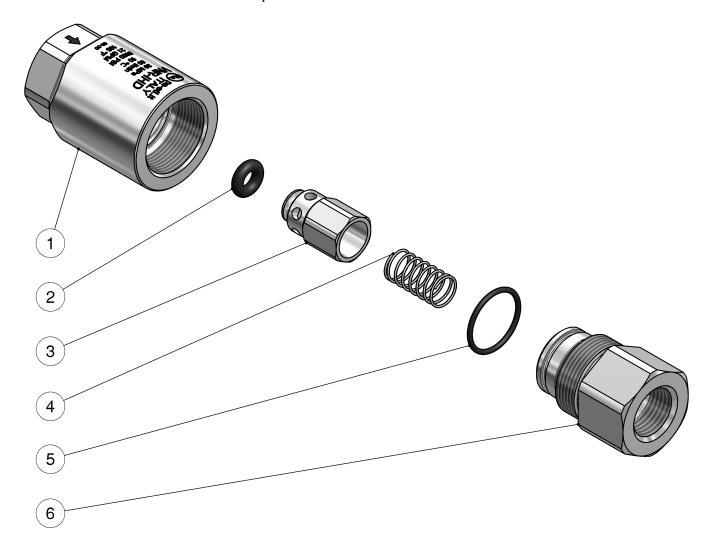


Pos	. P/N	Description	Q.ty	K1K	2K3	3K4		Pos.	P/N	Description	Q.ty	K1K	2K3	K4	
1	60.2147.51 Sst. seat 1/2	Bsp F x M30x1,5F	1				3	4	60.8007.51 Sp	ring, 0,8x12,2x27 mm Sst.	1				3
2	10.3292.08 O-ring, 4x8 n	nm Ni 85	1				10	5	10.3072.60 O-I	ring, 1,78x21,95 mm Ni 85	1				10
3	60.8020.51 Pin, hex.17 S	st	1				3	6	60.2146.51 Ss	t. coupling, 1/2 Bsp F x M30x1,5 M	1				3

60.2150.00 VNR-OHD check valv. brass 3/4 FF Bsp

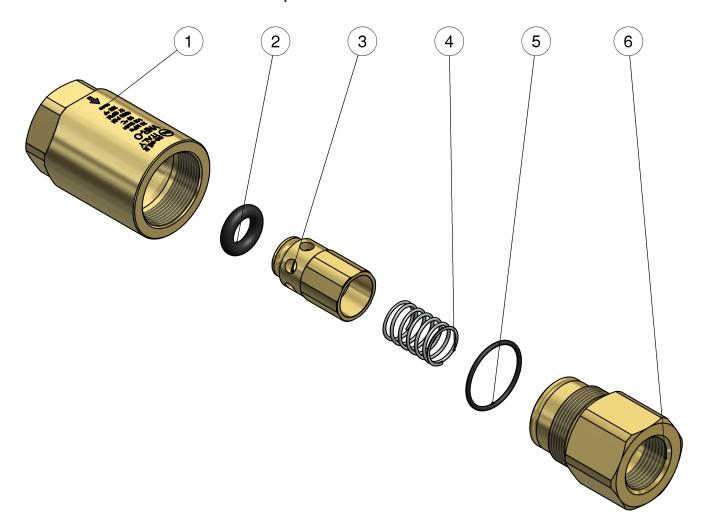


Pos	s. P/N	Description	Q.ty k	(1K	2 K 3	K4		Pos.	P/N	Description	Q.ty	K1K2	K3K4	
1	60.2151.31	Coupling, 3/4 Bsp F x M35x1,5 F brass	1				3	4	60.5013.51 Spri	ing, 1,3x18x29 mm Sst.	1			10
2	10.3314.00	O-ring, 5,33x12,06 mm	1				10	5	10.3077.08 O-ri	ng, 1,78x28,3 mm Ni 85	1			10
3	60.5012.99	Shutter pin, brass+or 5,33x12,06 mm N	1				2	6	60.4802.31 Cou	ıpling, 3/4"Bsp F brass	1			3

60.2160.00 VNR-OHD check valv. brass 1" FF Bsp

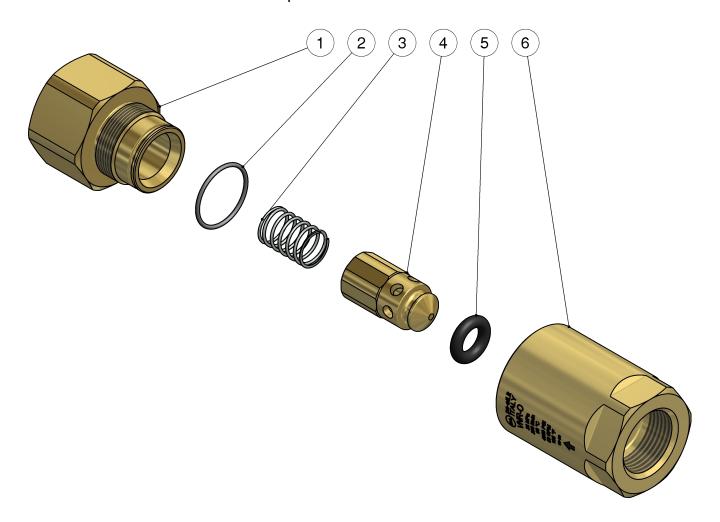

Pos	. P/N	Description	Q.ty	K1k	(2K	3 K 4		Pos.	P/N	Description	Q.ty	K1K2	2K3k	(4	I
1	60.4303.31	Shutter coupl., 1"Bsp F brass	1				1	4	60.5012.99 Shu	utter pin, brass+or 5,33x12,06 mm N	1			2	
2	10.3077.08	O-ring, 1,78x28,3 mm Ni 85	1				10	5	10.3314.00 O-ri	ng, 5,33x12,06 mm	1			10)
3	60.5013.51	Spring, 1,3x18x29 mm Sst.	1				10	6	60.2161.31 Coι	ıpling, 1" Bsp F x M35x 1,5 F brass	1			3	

60.2170.00 VNR-OHD check valv. brass 1"1/4 FF Bsp

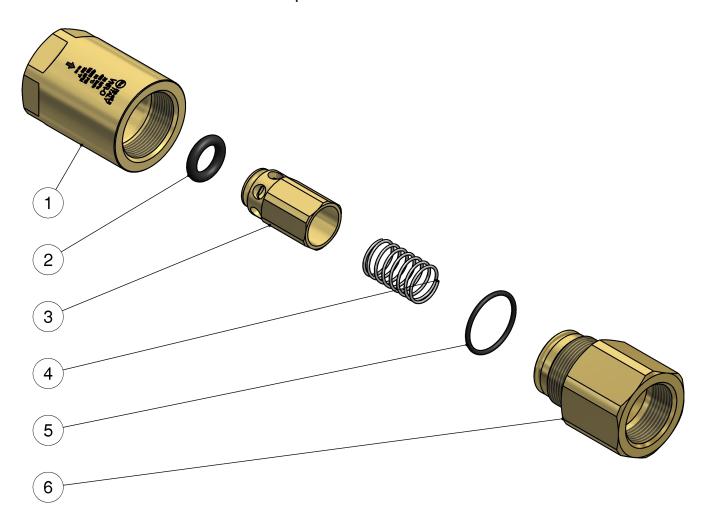

Pos	s. P/N	Description	Q.ty I	<1 I	K2K	3 K	4	Pos.	P/N Desc	ription	Q.ty I	K1K	2 K 3	3K4	
1	60.2171.31	Coupling, 1"1/4 Bsp F x M45x 2 F brass	1				3	4	60.4013.51 Spring, 1,6x23,1x44mm		1				3
2	10.3350.00	O-ring, 6x18 mm	1				10	5	10.3208.28 O-ring, 2,62x36,17 mm	Ni85	1				5
3	60.4012.31	Check valve	1				3	6	60.4014.31 Piston holder, 1"1/4 Bs	o F	1				3



